

# American Gate Lock Company Instructions


## Step #1

Once cover is placed over clutch, screw inner part of lock into threaded hole on clutch. (Snug)



## Step #2

Place outer body over center part of lock and align lower hole located on flat side of outer body (tray) with hole located on inner part of lock.

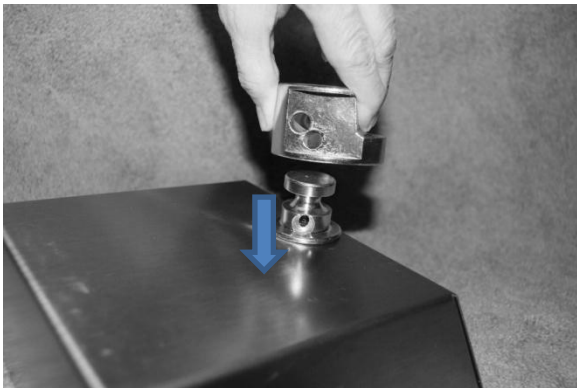

## Step #3

Insert latch post of Master Lock into hole while maintaining alignment of the outside and inside hole.

## Step #4

With body of Master Lock placed in saddle of the outer body, begin rotating lock clockwise until the inner lock is tight enough so it cannot be broke-loose with hand.



## Important Notice

Do not over tighten past 8 ft./lbs.

## Step #5a

Take off Master Lock. (Outer body should spin freely around inner body)

## Step #5b

Reverse Master Lock and insert latch post of Master Lock in hole, opposite from the flat side (tray) of the outside body.




# American Gate Lock Company Instructions

## Step #6

Adjust Master Lock so swivel part of Master Lock is placed in saddle of outside body.

## Step #7

Adjust Body of Master Lock so flat part of lock is horizontal. (parallel with top of A.G.L)

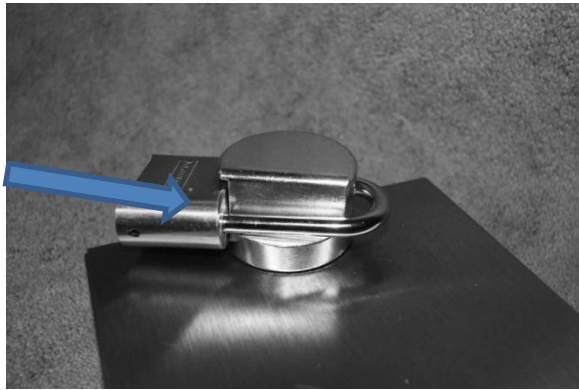

## Step #8

Lock Master Lock.

### Warning

Make sure code on Master Lock is not  
set to open

## Step #9

Reverse procedure to unlock.

For customer service, comments and  
questions please contact  
[www.americangatelock.com](http://www.americangatelock.com).